

North American Frequencies

Frequency	N (hex)	Band	Frequency	N (hex)	Band	Frequency	N (hex)	Band
530	34	1	930	5C	2	1330	84	4
540	35	1	940	5D	2	1340	85	4
550	36	1	950	5E	2	1350	86	4
560	37	1	960	5F	2	1360	87	4
570	38	1	970	60	2	1370	88	4
580	39	1	980	61	2	1380	89	4
590	3A	1	990	62	2	1390	8A	4
600	3B	1	1000	63	2	1400	8B	4
610	3C	1	1010	64	2	1410	8C	4
620	3D	1	1020	65	2	1420	8D	4
630	3E	1	1030	66	2	1430	8E	4
640	3F	1	1040	67	2	1440	8F	4
650	40	1	1050	68	2	1450	90	4
660	41	1	1060	69	2	1460	91	4
670	42	1	1070	6A	2	1470	92	4
680	43	1	1080	6B	2	1480	93	4
690	44	1	1090	6C	2	1490	94	4
700	45	1	1100	6D	2	1500	95	4
710	46	1	1110	6E	2	1510	96	4
720	47	1	1120	6F	2	1520	97	4
730	48	1	1130	70	2	1530	98	4
740	49	1	1140	71	2	1540	99	4
750	4A	1	1150	72	2	1550	9A	4
760	4B	2	1160	73	2	1560	9B	4
770	4C	2	1170	74	3	1570	9C	4
780	4D	2	1180	75	3	1580	9D	4
790	4E	2	1190	76	3	1590	9E	4
800	4F	2	1200	77	3	1600	9F	4
810	50	2	1210	78	3	1610	A0	4
820	51	2	1220	79	3	1620	A1	4
830	52	2	1230	7A	3	1630	A2	4
840	53	2	1240	7B	3	1640	A3	4
850	54	2	1250	7C	3	1650	A4	4
860	55	2	1260	7D	3	1660	A5	4
870	56	2	1270	7E	3	1670	A6	4
880	57	2	1280	7F	3	1680	A7	4
890	58	2	1290	80	4	1690	A8	4
900	59	2	1300	81	4	1700	A9	4
910	5A	2	1310	82	4	1710	AA	4
920	5B	2	1320	83	4			

BAND SWITCH SETTINGS

	SW3A	SW3B	SW3C	TUNE
Band 1	OFF (0)	OFF (0)	OFF (0)	L1, L2
Band 2	ON (1)	OFF (0)	ON (1)	L2
Band 3	OFF (0)	ON (1)	OFF (0)	L1
Band 4	ON (1)	ON (1)	OFF (0)	L1

EU/Australia Frequencies

Frequency	N (hex)	Band	Frequency	N (hex)	Band	Frequency	N (hex)	Band
531	3A	1	891	62	2	1251	8A	3
540	3B	1	900	63	2	1260	8B	3
549	3C	1	909	64	2	1269	8C	3
558	3D	1	918	65	2	1278	8D	3
567	3E	1	927	66	2	1287	8E	3
576	3F	1	936	67	2	1296	8F	3
585	40	1	945	68	2	1305	90	4
594	41	1	954	69	2	1314	91	4
603	42	1	963	6A	2	1323	92	4
612	43	1	972	6B	2	1332	93	4
621	44	1	981	6C	2	1341	94	4
630	45	1	990	6D	2	1350	95	4
639	46	1	999	6E	2	1359	96	4
648	47	1	1008	6F	2	1368	97	4
657	48	1	1017	70	2	1377	98	4
666	49	1	1026	71	2	1386	99	4
675	4A	1	1035	72	2	1395	9A	4
684	4B	1	1044	73	2	1404	9B	4
693	4C	1	1053	74	2	1413	9C	4
702	4D	1	1062	75	2	1422	9D	4
711	4E	1	1071	76	2	1431	9E	4
720	4F	1	1080	77	2	1440	9F	4
729	50	1	1089	78	2	1449	A0	4
738	51	1	1098	79	2	1458	A1	4
747	52	1	1107	7A	2	1467	A2	4
756	53	2	1116	7B	2	1476	A3	4
765	54	2	1125	7C	2	1485	A4	4
774	55	2	1134	7D	2	1494	A5	4
783	56	2	1143	7E	2	1503	A6	4
792	57	2	1152	7F	2	1512	A7	4
801	58	2	1161	80	2	1521	A8	4
810	59	2	1170	81	2	1530	A9	4
819	5A	2	1179	82	2	1539	AA	4
828	5B	2	1188	83	3	1548	AB	4
837	5C	2	1197	84	3	1557	AC	4
846	5D	2	1206	85	3	1566	AD	4
855	5E	2	1215	86	3	1575	AE	4
864	5F	2	1224	87	3	1584	AF	4
873	60	2	1233	88	3	1593	B0	4
882	61	2	1242	89	3	1602	B1	4

BAND SWITCH SETTINGS

	SW3A	SW3B	SW3C	TUNE
Band 1	OFF (0)	OFF (0)	OFF (0)	L1, L2
Band 2	ON (1)	OFF (0)	ON (1)	L2
Band 3	OFF (0)	ON (1)	OFF (0)	L1
Band 4	ON (1)	ON (1)	OFF (0)	L1